

# PVC-lightweight coatings


Imitation leather with maximum thicknesses up to 1.5mm with textile carrier and a PVC soft coating  
(labour protection materials, imitation leather for upholstery, tablecloths)

## Cleaning




- Wiping with warm water with the addition of liquid mild detergent
- No use of solvent or solvent-based systems and abrasive products as well as bleaching agents, sprays and others

## Washing

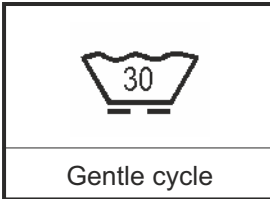

- Washing at 30°C is also possible in the washing machine several times

## Drying

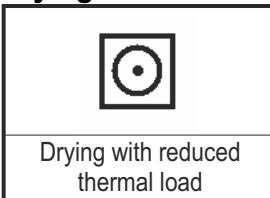


- Gentle drying with reduced thermal load possible in the tumbler up to 60°C

## Dry cleaning



- No dry cleaning possible

## Ironing

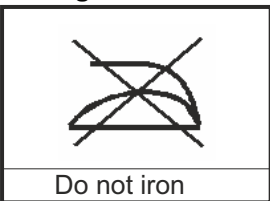

- Do not iron  
(only lukewarm ironing of the textile back possible!)

## Further information:

- \* In order to avoid embrittlement, no oily and/or fatty substances should be used for cleaning and care!
- \* The textile side of the imitation leather (layer carrier) should have no direct contact with plasticiser-absorbing materials such as PUR foams. Using an interlining fleece (polyester) with a grammage of at least 40g/m<sup>2</sup> is recommended.
- \* The instructions and information listed are no guarantee and do not release the user from his duty of care with regard to the handling of materials and cleaning agents.
- \* Certain clothing and accessory dyes (such as those used on denim jeans) may migrate to lighter colors. This phenomenon is increased by humidity and temperature and is irreversible. Vowalon will not assume responsibility for dye transfer caused by external contaminants and possible permanent staining caused by this phenomenon.

